

		Load conditions according to Euler							
		Load condition 1		Load condition 2		Load condition 3		Load condition 4	
Type of installation									
Configuration		Dimension l is the installation length when extended or in the position to be calculated							